


TP151 44 REPLACEMENT CONTROL BOX

INSTRUCTIONS


STEP 1

Loosen and remove the screws along the bottom of the control-box housing (there are 3 screws on each side of the housing or 6 screws total).

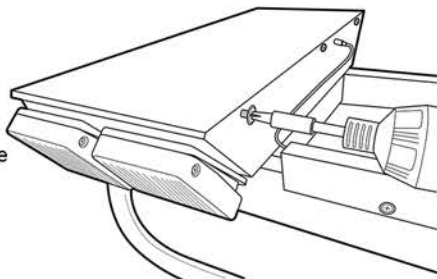


STEP 2

Unplug the red color electrical cord.

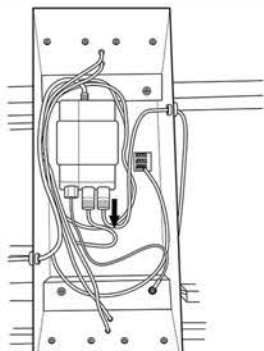


STEP 3

Using a Philips-head screwdriver remove the four screws along the controls-box housing. Gently unthread the green/ yellow ground wire from the small hole on the bottom of the housing channel.

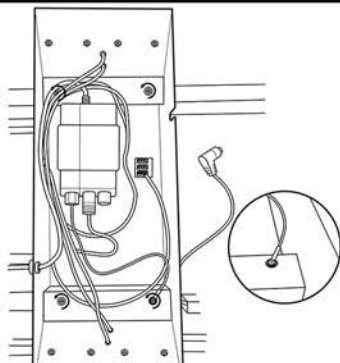


STEP 4

Remove the screws from the black tube (save the screws). Pull the main power cord which is connected with the control-box. Please note: Left the red color electrical cord only.

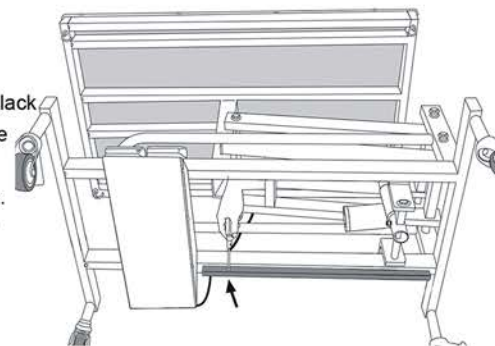


STEP 5

Once the screws are removed. Gently remove control-box and insert the new control box into its housing, fastened to its back. Reattach the loose green/ yellow ground wire to the same place using the reserved mounting screw and a Philips-head screwdriver.

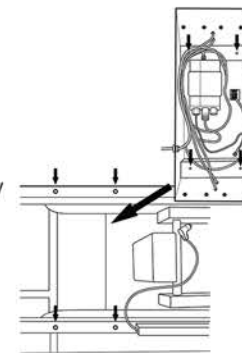

STEP 6

Plug the red color electrical cord back into the power-supply box.

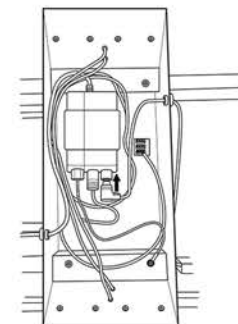

STEP 7

Replace the remaining 6 screws (reserved from step 1) along the bottom and top of the control-box housing. Insert the main power cord (reserved from step 4) into the black tube and tighten screws to secure in place.

