


## Tools Needed


Hammer or Mallet

Phillips head screwdriver


Flat head screwdriver (or other pointed tool)

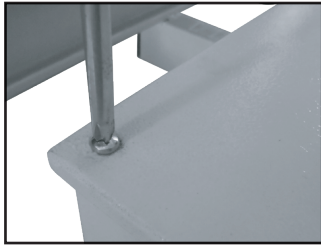


- 1) Using a Phillips head screwdriver, loosen the screws from the electrical control box cover. Remove the cover.

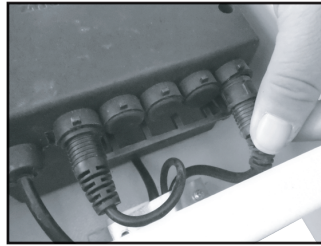


- 2) Unplug the cord that connects the electrical control box to the electric lift mechanism.

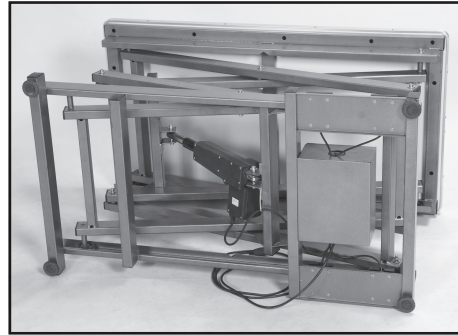


- 3) With the help of one or two people, lay the grooming table/tub on its back—and not on either one of its sides.  
*Please note: This is a precautionary step to ensure your safety. You risk injury if you service the table/tub while it remains standing in the upright position because the suspended table/tub, without a power source to lock it in place, could drop on you. Please take precautions to avoid injuries.*

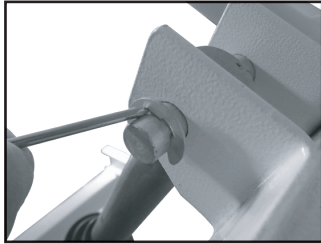


- 4) Use a flathead screwdriver (or other pointed tool) to pull out the snap rings from the locking pins on the electric lift mechanism.

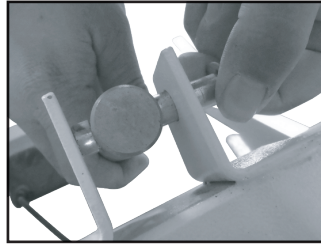


- 5) Use a hammer or mallet to tap out the two locking pins from the base and top of the electric lift mechanism.

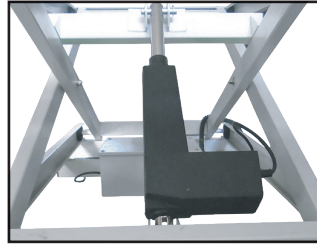


- 6) Remove the old electric lift mechanism.

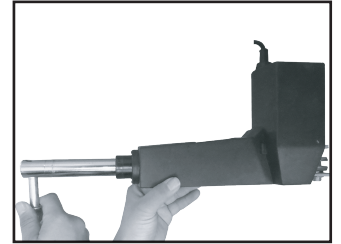


- 8) Insert one of the locking pins into the attachment hole at the top of the electric lift shaft and rotate counterclockwise to extend, until the tip reaches the mounting brackets on the table/tub frame.

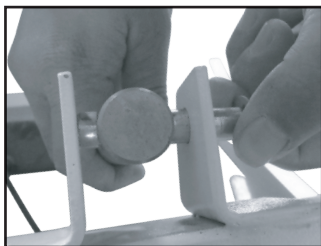


- 9) Remove the locking pin, slide to the top of the electric lift shaft into place between the mounting brackets, and reinsert the locking pin through the mounting brackets and the top of the electric lift shaft.

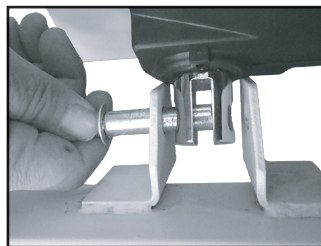

- 10) Slide the other locking pin through the mounting brackets at the base of the electric lift mechanism.

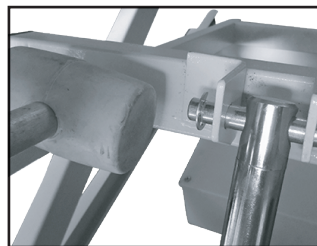

- 11) Using a hammer, tap both locking pins into place.

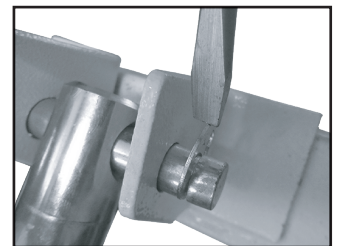


- 12) Using a flathead screwdriver (or other pointed tool), replace the snap rings to secure the locking pins.

**Electric Lift Mechanism Replacement Instructions (Continued):**


13) With the help of one or two people, position the grooming table/tub upright.



14) Slide the cord from the new electric lift mechanism through the rubber gasket on the electrical control box.

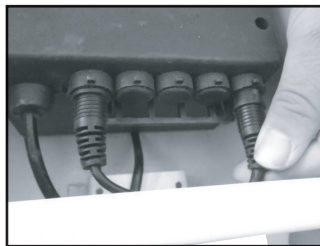

15) Plug the cord from the new electric lift mechanism into the cord port on the electrical control box.

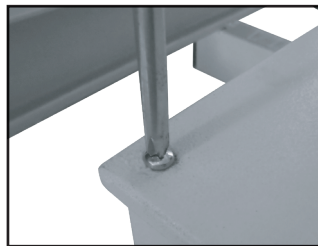

16) Place the cover back onto the electrical control box. Using a Phillips head screwdriver, replace the screws and tighten to secure in place.

---

**SAFETY WARNING**

1. Use only as described in this manual. Use only manufacturer's recommended attachments.
2. This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the product by a person responsible for their safety. Children should be supervised to ensure that they do not play with the product.
3. DO NOT modify, disassemble or repair.
4. Avoid using the product in dusty, vibrating and wet environments and in chemical storage places.

---

**LIMITED WARRANTY**

This Master Equipment® Electric Lift Mechanism Replacement is warranted against defective material or workmanship for one year from the date of purchase. Any Master Equipment® product that is determined to be defective in material or workmanship during the warranty period will be replaced without cost to the purchaser for parts or labor. Please contact Boss Pet Products Customer Service at 1-800-638-5754 regarding any defective product. Boss Pet Products will not be liable under this warranty for any defect, failure or malfunction of this product caused by normal wear, abuse, misuse, unauthorized adjustments or repairs. Boss Pet Products will not be liable for any incidental or consequential damages of any type. Any implied warranty is limited to the one-year period provided in this express warranty. Some states do not allow limitations on how long an implied warranty lasts or exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. Warranty is void if product has been modified in any manner, repaired by anyone other than Boss Pet Products or has been subject to unreasonable use. Warranty is valid in the United States.

Date Purchase: \_\_\_\_\_



Manufactured for  
© Boss Pet Products, Inc., Danvers, MA 01923  
MADE IN CHINA

TP65738 Master Equipment®  
Electric Lift Mechanism Replacement